

KP1308A2

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4451969	4451970	4451975	4451976	4451977	8300431
8300432	8300437	8300438	8300439	8300640	

Connects with the following oven control board part numbers.

1057546	4451856	4451991	4452890	4452898	4453664
8302967	8301917	8302152	8302319	W10406070	W10438751

Used in the following oven models.

RBD276PDB10	RBD276PDB11	RBD276PDB12	RBD276PDB7	RBD276PDB8	RBD276PDB9
RBD276PDQ10	RBD276PDQ11	RBD276PDQ12	RBD276PDQ7	RBD276PDQ8	RBD276PDQ9
RBD306PDB10	RBD306PDB11	RBD306PDB12	RBD306PDB13	RBD306PDB14	RBD306PDB15
RBD306PDB7	RBD306PDB8	RBD306PDB9	RBD306PDQ10	RBD306PDQ11	RBD306PDQ12
RBD306PDQ13	RBD306PDQ14	RBD306PDQ15	RBD306PDQ7	RBD306PDQ8	RBD306PDQ9
RBD306PDT11	RBD306PDT12	RBD306PDT13	RBD306PDT14	RBD306PDT15	RBD306PDZ10
RBD306PDZ7	RBD306PDZ8	RBD306PDZ9			