

KP1308BN

Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.

4452703	4452704	4452708	4452709	4455252	8300444
8300445	8300446	8300447	8300451	8300452	

Connects with the following oven control board part numbers.

961211	4452892	8186024	4452900	4453193	

Used in the following oven models.

GBS277PDB3	GBS277PDB4	GBS277PDB5	GBS277PDB6	GBS277PDB7	GBS277PDB8
GBS277PDQ3	GBS277PDQ4	GBS277PDQ5	GBS277PDQ6	GBS277PDQ7	GBS277PDQ8
GBS277PDS3	GBS277PDS4	GBS277PDS5	GBS277PDS6	GBS277PDS7	GBS277PDS8
GBS277PDT3	GBS277PDT5	GBS277PDT6	GBS277PDT7	GBS277PDT8	GBS307PDB3
GBS307PDB4	GBS307PDB5	GBS307PDB6	GBS307PDB7	GBS307PDB8	GBS307PDQ4
GBS307PDQ5	GBS307PDQ6	GBS307PDQ7	GBS307PDQ8	GBS307PDS3	GBS307PDS4
GBS307PDS5	GBS307PDS6	GBS307PDS7	GBS307PDS8	GBS307PDT3	GBS307PDT4
GBS307PDT5	GBS307PDT6	GBS307PDT7	GBS307PDT8		