

# KP1308CN

**Replaces the touchpad element of the following Whirlpool® control panels, keypads, & touchpads.**

4451301	4451302	4451304	4451305	4451307	4451308
4451316	4451317	4451318	4451313	4451314	

**Connects with the following oven control board part numbers.**

4448876	4452242				

**Used in the following oven models.**

RBD245PDB1	RBD245PDB2	RBD245PDB3	RBD245PDB4	RBD245PDB6	RBD245PDQ1
RBD245PDQ2	RBD245PDQ3	RBD245PDQ4	RBD245PDQ6	RBD275PDB1	RBD275PDB2
RBD275PDB3	RBD275PDB4	RBD275PDB6	RBD275PDQ1	RBD275PDQ2	RBD275PDQ3
RBD275PDQ4	RBD275PDQ6	RBD276PDB1	RBD276PDB2	RBD276PDB4	RBD276PDB6
RBD276PDQ1	RBD276PDQ2	RBD276PDQ4	RBD276PDQ6	RBD305PDB1	RBD305PDB2
RBD305PDB3	RBD305PDB4	RBD305PDB6	RBD305PDQ1	RBD305PDQ2	RBD305PDQ3
RBD305PDQ4	RBD306PDB1	RBD306PDB2	RBD306PDB4	RBD306PDB6	RBD306PDQ1
RBD306PDQ2	RBD306PDQ4	RBD306PDQ6	RBD306PDZ1	RBD306PDZ2	RBD306PDZ4
RBD306PDZ6					